



Auto Expel Mist Machine & Sanitising Liquid



Product overview



Have peace of mind and eliminate germs, viruses and bacteria from the vehicle.

Due to its unique formula Ring Auto Expel sanitises the entire vehicle cabin, including the air-conditioning system.

As well as creating a safe clean environment for you and your customer, the mist will freshen your cabin, reducing stubborn odours.

- Misting machine
- Sanitising liquid
- Remote control
- Mains plug
- On/off switch
- 6 Remote control socket
- Mains power input
- Fluid level indicator
- Fluid reservoir cap


















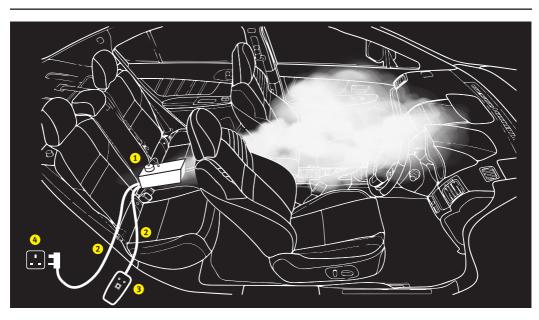

Instructions

First use only: Remove cap, pierce film and empty the test fluid out of the reservoir in the machine.

- 1. Fill the reservoir with the Ring Auto Expel Misting Sanitiser and replace the cap. Insert the clear tube through the cap and into the reservoir.
- 2. Place the misting machine forwards, on the middle of the rear seats of the vehicle. If you have a van place the misting machine forwards on the middle seat. Run all the cables **9** out of the vehicle, including the remote **9**.



3. Ensure all vehicle windows are wound up and all the doors of the vehicle are shut.



4. Plug the misting machine into the mains power 4 and switch on.



5. Wait for a few minutes for the misting machine to heat up. When it is ready the red light will show on the remote 3.



6. Hold the button on the remote for approximately 5 minutes until the vehicle is full of mist. At this stage visibility will be very poor.



7. Leave the mist to settle for 20 - 25 minutes.



8. Open the doors and let the mist clear. Remove the machine and treatment is complete.

Please note.

If vehicle has air-conditioning, run this on recycle to ensure the air-conditioning system is also sanitised. Remember to clean touch points of the vehicle with Ring Auto Expel Sanitising Spray.

Ring Automotive Limited . Gelderd Road, Leeds, LS12 6NA United Kingdom Telephone +44 (0)113 213 2000 Fax +44 (0)113 231 0266

