

## RTC1000

### Quick start guide.

insert the connector adaptor into the tyre. Plug the 12V DC plug into the vehicle 12V socket. Most vehicle 12V socket/cigarette lighter sockets are not live with the engine off, so you may need to start the engine, (handbrake on, gears in neutral). Press the yellow dial under the LCD screen to select the pressure measurement dimension from Bar, Kg/cm<sup>3</sup>, Psi.

Each small press of the yellow dial should make the Bar, Kg/cm<sup>3</sup>, and Psi indicator scroll to the next measurement. If it is showing KPa you press the dial and it shows BAR, press it again and it shows Psi. Keep pressing until you see the pressure dimension you need.

When you are happy with the dimensions displayed (most people use Psi), rotate the yellow dial. This allows you to change the target pressure value. Rotate the dial until the target pressure you want is displayed.

The small numbers at the top right of the LCD will display the target pressure value to which the item will be inflated. The big numbers at the bottom of the screen are the current pressure reading. Push the ON/OFF button for the compressor to start. When the pressure gauge reaches the required value, the compressor will automatically switch off and the LCD display will show "OFF".

Push the ON/OFF button to switch the compressor off.